

HOW TO PROGRAM AN ADDITIONAL TRANSMITTER



Advice:

- Both sides of the plug connections can be used identically.
- For multi-channel hand transmitters this step has to be carried out separately for each button.




Attention:

- An actuation of the hand transmitter may start the door movement!
- After the hand transmitter has been recoded, the garage door system to be actuated must also be reprogrammed to adopt the new coding, since the old coding has been irretrievably lost!

Learning the coding

This function is meant to transmit the coding of an existing hand transmitter to an additional hand transmitter.

1

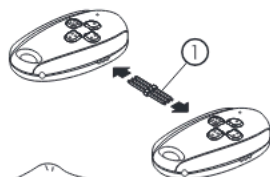

2



3



Step 1

- Connect both hand transmitters by means of the enclosed coding plug ①.

Step 2

- Actuate the existing hand transmitter and hold the button.
The LED on the transmitter is on.

Step 3

- Actuate the desired button of the new hand transmitter and hold the button of the existing hand transmitter.

After 1 - 2 sec. the LED on the new transmitter is glowing permanently.
Programming is terminated.


The new hand transmitter has now taken over the coding of the existing hand transmitter.

- Remove the coding plug ①.

Altering the coding

It is possible to change the coding of the hand transmitter in case that a hand transmitter has gone lost.
For this insert the coding plug ① into the hand transmitter that has to be reprogrammed.

1

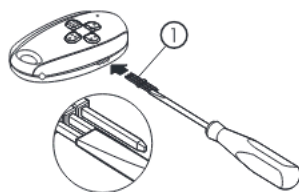

Step 1

- Insert the coding plug ① into the hand transmitter.
- Short-circuit one of the outer pins of the coding plug with the centre lead (e.g. by means of a screwdriver).
- Actuate the desired button on the hand transmitter. The integrated random program generates a new code. The LED is flashing quickly.

As soon as the LED on the hand transmitter is on permanently, release the button of the hand transmitter and remove the coding plug.