

Hormann Garador 868Mhz HSM4 Blue Buttons Programming

1. If you don't have an original Hormann remote.

- A. Factory Setting: Program the new remote with the receiver same as original. (Press and hold the learn button on the the receiver for 2-3 seconds, then press any button of the remote that you want to be learned)

2. If you have the working original Hormann remote.

- B. You can copy the code from your original Hormann face to face as follow steps:

a: Clear the code: Press and hold button 4 and button 2 until the led flash quickly. Release button 2, then press button 2 for 3 times slowly, the LED will flash quickly, release two buttons (press any button, no led flash, the code is deleted)

b: Copy the code: Press and hold button 1 of the original Hormann, then press and hold button 1 of the duplicator until you can see the duplicator's LED flash, release both buttons, finish copy, copy other buttons in the same way.

3. Reset Code

Press and hold the button 1 and button 3 at the same time about 5 seconds until the LED flash quickly, the code is back to factory setting.

4. Remark

Button 1 – UP with 1 dot

Button 3 – Down Button with 3 dots

Button 2 – RIGHT with 2 dots

Button 4 – LEFT Button with 4 dots

